


Water Pump Installation

IMPORTANT: Prevent oil and grease from coming in contact with the thermostat housing gasket. Make sure there are no oil leaks from the valve cover, oil cooler, or other components before installing the water pump assembly. If oil or grease come in contact with the thermostat housing gasket, it may cause the gasket to swell and crack the thermostat housing, causing failure of the water pump assembly.

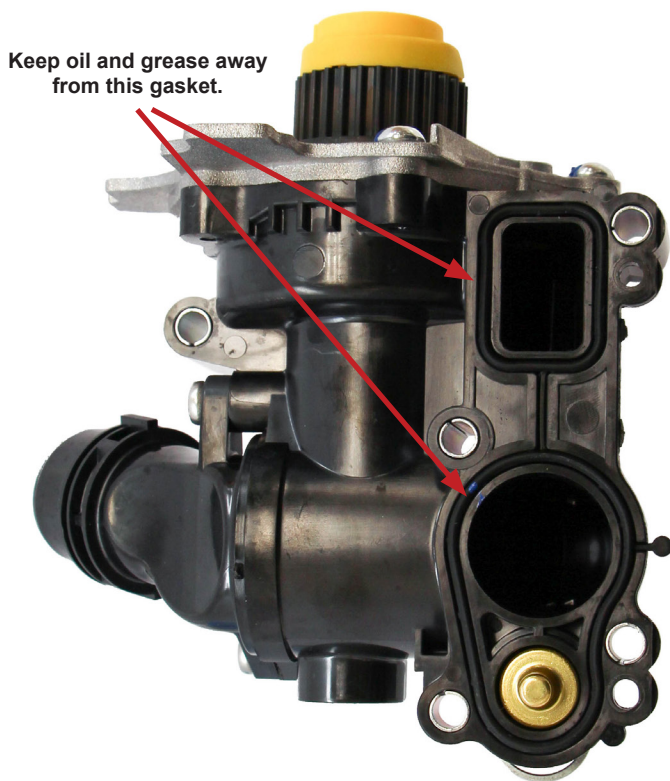

Cracking of the thermostat housing due to gasket swelling.

